

Vehicle: Ground Locations

Text Description of Ground Locations

Component.....	Location
G100.....	Lower LH front of Engine, on Transaxle Mounting Stud
G103.....	On Radiator Support, behind LH Headlights
G104.....	On Radiator Support, behind RH Headlights
G111.....	LH side of Engine, on Transaxle Stud
G114.....	LH side of Engine Compartment, behind LH Strut Tower
G200.....	Behind I/P on RH side of Steering Column Bracket
G201.....	On I/P Bracket, above Steering Column
G300.....	Behind rear seat, below package shelf
G301.....	Inside LH side of Liftgate
G302.....	Under LH Front Seat
G312.....	LH side of Liftgate Pillar
G314.....	Center of RH rear Quarter Pillar
G317.....	Below RH side of tailgate window